



# RGB POK3R User manual

Vortexgear RGB POK3R is the world's first small size keyboard with RGB LEDs. It's integrating 3 kind of layout. Also features 3 layers customization options individually programmable key codes and LEDs, all easily set through what you want.

## Main Features:

1. Tiny size ANSI or ISO layout
2. Cherry RGB MX inside
3. Arbitrary programming key code and LED colors
4. ABS double shot Keycaps
5. 3 layers customization
6. Built-up 3 kind of layout (Qwerty, Dvorak, Colemak)
7. Metal bezel

## Package Content:

1. Keyboard x 1
2. USB Cable x 1

Enjoy now for this fantastic tool and your typing feeling.

## Keycode Programming Instructions<sup>\*1</sup>:

- Step 1. Choose a layer (Fn+<, > or ? key) you want to edit the keycodes.
- Step 2. Press Fn + Right CTRL to enter the programming mode (Spacebar right LED steadily lit)
- Step 3. Select a desire key you want to program (Spacebar right LED flashing)
- Step 4. Key in the programming contents and then press Pn(Spacebar right LED steadily lit again)
- Step 5. Repeat step 2 and step 3 to program other keys.
- Step 6. Press Fn + Right CTRL to exit programming mode (Spacebar right LED off)

### More:

- Support Fn layer programming, you can select the Fn combination key (e.g., Fn + A) to program it
- Support time delay, press 15ms key (Fn + T) each time to delay 15ms, press 0.1s key (Fn + G) each time to delay 0.1s, press 0.5s key (Fn + B) each time to delay 0.5s. Consecutive delay will add up but will only be counted as 1 key stroke.
- Every key can program up to 32 key strokes.
- If there is no key pressed for 15 sec in programming mode, it will back to normal mode.

### Note:

<sup>\*1</sup> Default layer, R\_ctrl, M, <, > and ? keys are fixed can't be programmed.

## Restore to factory default:

### Current layer:

Press and hold Fn + R

### All layers:

Press and hold both Alt keys, it will clean all the layers' program key codes.

### Remark:

1. When you reset the current layer or all layers, the spacebar left LED will flash at the after 5 seconds then it will return to default.
2. If you had changed the Fn position and forgot where it was. You still can press the *original* position of Fn + R to restore it.

Fn General keys				Remark	
Fn	+	ESC	=	`	Key code change
		1	=	F1	
		2	=	F2	
		3	=	F3	
		4	=	F4	
		5	=	F5	
		6	=	F6	
		7	=	F7	
		8	=	F8	
		9	=	F9	
		0	=	F10	
		- _	=	F11	
		= +	=	F12	
		I	=	↑	
		J	=	←	
		K	=	↓	
		L	=	→	
		P	=	PrtSc	
		[ {	=	ScrLk	
		] }	=	Pause	
		Z	=	APP	
		H	=	Home	
		N	=	End	
		U	=	PgUp	
O	=	PgDn			
Backspace	=	Del			
" '	=	Del			
::	=	Ins			

Switching Layer					Remark
Fn	+	M	=	Default	Spacebar left LED off
		<,		Layer 2	Spacebar left LED showing <b>RED</b> color.
		>.		Layer 3	Spacebar left LED showing <b>Green</b> color
		?/		Layer 4	Spacebar left LED showing <b>Blue</b> color

Multimedia key function					Remark
Fn	+	Q	=	Previous	
		W		Pause/Play	
		E		Next	
		S		Volume -	
		D		Volume +	
		F		Mute	

Multi-color dynamic Backlighting				Remark	
Pn	+	ESC	=	Palette	
		1		Single Color - Red	
		2		Single Color - Green	
		3		Single Color - Blue	
		4		Display single color LED mode <sup>*2</sup>	
		5		Display full color LED mode <sup>*3</sup>	
		9		Custom LED mode 1	
		0		Custom LED mode 2	
		- _		Display recording 1	
		= +		Display recording 2	
		X		Brightness down	
		V		Brightness up	
		<		LED speed up	
		>		LED speed up	

Note:

<sup>\*2</sup> Interactive mode, Flash vortex mode, Laser row mode.

<sup>\*3</sup> Full key light mode, Breath mode, Vortex mode, Rain drop mode.

## RGB LEDs edit descriptions:

The RGB POK3R has a total of 3 layers to edit the LEDs.<sup>\*4</sup>

Step 1. Choose a layer (Fn+<, > or ? key) you want to edit.

Step 2. Press Pn + 9 or 0 to enter the edit mode.

Step 3. Press Pn + 1,2 and 3 to mix color<sup>\*5</sup> **OR** press Pn + ESC<sup>\*6</sup> to turn on the palette and select a color you want.

Step 4. Select a key or a row you want to change color.

Step 5. Press Pn + 9 or 0 again to exit edit mode.

Step 6. Press Pn + - or Pn + = to display the previously saved setting.

Note:

<sup>\*4</sup> Each layer can be edited in single key(Pn+9) or whole row(Pn+0)

<sup>\*5</sup> The color you mixed will show on Pn key

<sup>\*6</sup> There are total have 61 kinds of colors on palette.

## DIP Switch function descriptions:

SW 1	SW 2		Layout	Remark
ON	ON	=	Colemak	Default = OFF
ON	OFF	=	Dvorak	
OFF	ON	=	Qwerty	
OFF	OFF	=	Qwerty	

	ON	OFF	Remark
SW 3	CapsLock = FN	CapsLock = CapsLock	Default = OFF
SW 4	Change Fn & Pn at any position	Fn & Pn at original position	R_CTRL Shall not be changed to Fn or Pn

### Others:

1. Fn + Shift + ESC = ~
2. L\_Win + R\_Alt + Spacebar:  
The bottom right corner as arrow keys.